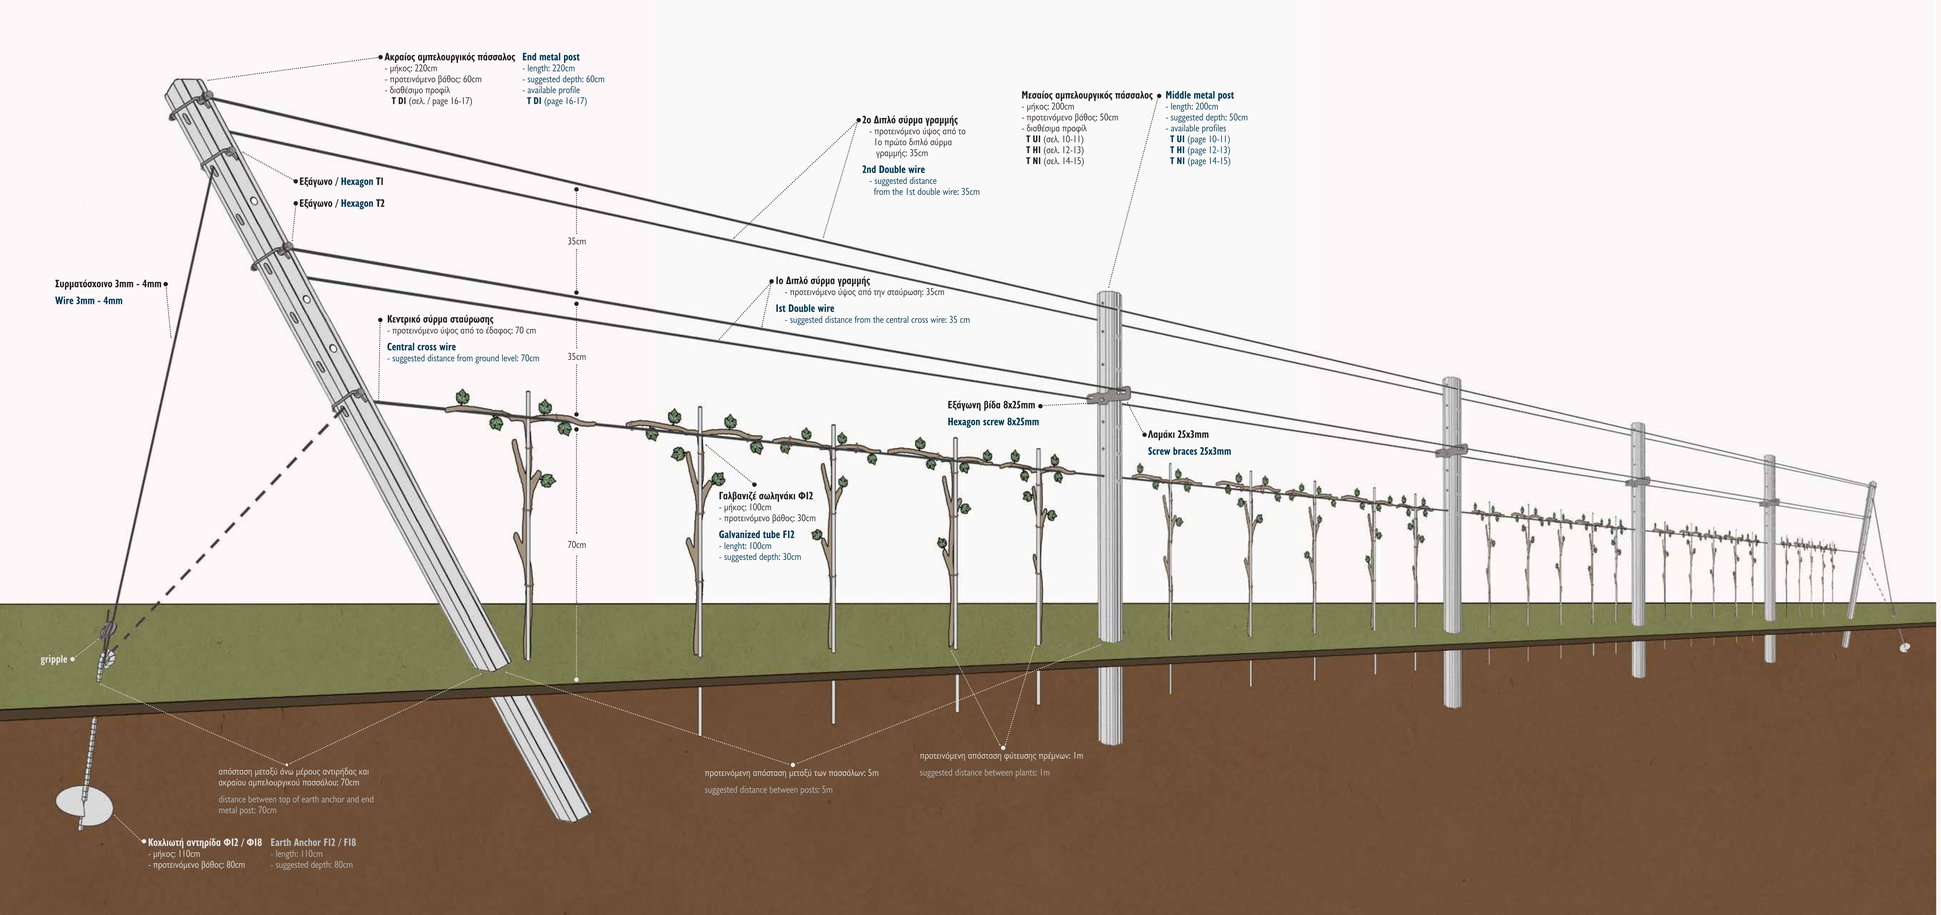

ΣΧΗΜΑΤΙΚΗ ΠΑΡΑΣΤΑΣΗ ΓΡΑΜΜΙΚΟΥ ΣΥΣΤΗΜΑΤΟΣ ΥΠΟΣΤΥΛΩΣΗΣ

ΒΗΜΑΤΑ ΤΟΠΟΘΕΤΗΣΗΣ ΠΑΣΣΑΛΩΝ - ΕΞΑΡΤΗΜΑΤΩΝ ΓΡΑΜΜΙΚΟΥ ΑΜΠΕΛΩΝΑ

SCHEMATICS OF A LINE TRELLIS

STEPS FOR THE INSTALLATION OF LINEAR VINEYARD METAL POSTS AND ACCESSORIES

Βήμα 1: Καρφώνουμε τον ακραίο πάσσαλο T DI

Βήμα 2: Βιδώνουμε την κοχλιωτή αντηρίδα

Βήμα 3: Τοποθετούμε το εξάγωνο TI στον ακραίο πάσσαλο T DI

Βήμα 4: Περνάμε το συρματόσχοινο μέσα από την αντηρίδα και το εξάγωνο TI και το τεντώνουμε με το gripple

Βήμα 5: Καρφώνουμε τους μεσαίους πασσάλους (T HI ή T NI ή T UI)

Βήμα 6: Τοποθετούμε το εξάγωνο TI στον ακραίο πάσσαλο T DI

Βήμα 7: Περνάμε το κεντρικό σύρμα σταύρωσης μέσα από τις κεντρικές τρύπες του πασσάλου και το τεντώνουμε με το εξάγωνο TI

Βήμα 8: Καρφώνουμε το σωληνάκι Φ12 στο φυτό και το δένουμε πάνω στο σύρμα σταύρωσης

Βήμα 9: Βιδώνουμε τα λαμάκια 25x3mm - 20cm πάνω στους μεσαίους πασσάλους

Βήμα 10: Τοποθετούμε το εξάγωνο T2 στον ακραίο πάσσαλο T DI

Βήμα 11: Περνάμε τα σύρματα μέσα από τις εγκοπές που έχει το λαμάκι 25x3mm και τεντώνουμε με το εξάγωνο T2

Βήμα 12: Τοποθετούμε το εξάγωνο T2 στον ακραίο πάσσαλο T DI

Βήμα 13: Περνάμε τα 2 τελευταία σύρματα μέσα από τις εγκοπές του μεσαίου πασσάλου και τεντώνουμε με το εξάγωνο T2

* Το μήκος και το βάθος των πασσάλων μπορεί να αλλάξει ανάλογα με την ιδιομορφία του εδάφους και την ποικιλία των φυτών.

Step 1: Install the end metal post T DI

Step 2: Drive in the earth anchor

Step 3: Install Hexagon TI at the end metal post T DI

Step 4: Drive the high tensile wire through the earth anchor and Hexagon TI and tension with the Gripple tool

Step 5: Install the middle metal posts (T HI or T NI or T UI)

Step 6: Install Hexagon TI at the end metal post T DI

Step 7: Drive the central cross wire through the central holes of the metal post and tension with Hexagon TI

Step 8: Install the galvanized tube F12 next to the plant and tie it to the central cross wire

Step 9: Screw braces 25x3mm - 20cm onto the middle metal posts

Step 10: Install Hexagon T2 at the end metal post T DI

Step 11: Drive the wires through the notches of the 25x3mm brace and tension them with Hexagon T2

Step 12: Install Hexagon T2 at the end metal post T DI

Step 13: Drive the last 2 wires through the notches of the middle metal post and tension them with Hexagon T2

* the length and depth of the posts can change depending on the terrain and variety of plants

ΣΧΕΔΙΑΖΟΥΜΕ ΤΟ ΜΕΛΛΟΝ ΤΩΝ ΑΜΠΕΛΩΝΩΝ
WITH THE FUTURE OF VINEYARDS IN MIND